

# Ucho Pro



## How to use Ucho Pro

1. Plug Ucho Pro into the XLR inputs on your device.
2. Turn on the phantom power. On some devices phantom power needs to be turned on via button or menu option. Consult the manual if you're not sure how to do it.
3. Set your gain to appropriate level and enjoy!

[How to attach clips to Uši microphones](#)

## Technical specifications

<b>Phantom powered, pre-polarized condenser microphone</b>	
<b>Operating voltage</b>	24-48V
<b>Cable</b>	1.5 m with 2.5 mm diameter
<b>Maximum input pressure level</b>	~122 dB SPL
<b>Sensitivity</b>	-28 dB at 1kHz (±3 dB)
<b>Self-noise</b>	~14 dBA
<b>Output</b>	XLR-3M balanced, transformer-less, floating
<b>Output impedance</b>	30-50 Ω
<b>Power consumption</b>	~3mA per pin

From:  
<http://knowledge.lom.audio/> - LOM knowledge base

Permanent link:  
<http://knowledge.lom.audio/manuals/uchopro?rev=1504692788>

Last update: 2017/09/06 12:13



