

Ucho Pro



How to use Ucho Pro

1. Plug Ucho Pro into the XLR inputs on your device.
2. Turn on the phantom power. On some devices phantom power needs to be turned on via button or menu option. Consult the manual if you're not sure how to do it.
3. Set your gain to appropriate level and enjoy!

[How to attach clips to Uši microphones](#)

Technical specifications

Phantom powered, pre-polarized condenser microphone	
Operating voltage	24-48V
Cable	1.5 m with 2.5 mm diameter
Maximum input pressure level	~122 dB SPL
Sensitivity	-28 dB at 1kHz (± 3 dB)
Self-noise	~14 dBA
Output	XLR-3M balanced, transformer-less, floating
Output impedance	30-50 Ω
Power consumption	~3mA per pin

From:
<http://knowledge.lom.audio/> - LOM knowledge base

Permanent link:
<http://knowledge.lom.audio/manuals/uchopro?rev=1504692824>

Last update: 2017/09/06 12:13



